

Limited Warranty

Products manufactured by Walrus Pumps Co (Walrus) are warranted to the first user only to be free of defects in material and workmanship for a period of 12 months from date of installation, but no more than 24 months from date of shipment. Walrus' liability under this warranty shall be limited to repairing or replacing at our election, without charge, FOB Walrus' distribution center or authorized service agent. Walrus will not be liable for any cost of removal, installation, transportation or any other charges that may arise in connection with warranty claim.

The warranty period commences on the date of original purchase of the equipment. Proof of purchase and installation date, failure date, and supporting installation data must be provided when claiming repairs under warranty.

This warranty is subject to due compliance by the original purchaser with all directions and conditions set out in the installation and operating instructions. Failure to comply with these instructions, damage or breakdown caused by fair wear and tear, negligence, misuse, incorrect installation, inappropriate chemicals or additives in the water, inadequate protection against freezing, rain or other adverse weather conditions, corrosive or abrasive water, lightning or high voltage spikes or through unauthorized persons attempting repairs are not covered under warranty.

Walrus will not be liable for any incidental or consequential damages, losses, or expenses, arising from installation, use, or any other causes. There are no express or implied warranties, including merchantability or fitness for a particular purpose, which extend beyond those warranties described or referred to above.

Certain states do not permit the exclusion or limitation of incidental or consequential damages or the placing of limitations on the duration of an implied warranty, therefore, the limitations or exclusions herein may not apply. This warranty sets forth specific legal rights and obligations, however, additional rights may exist, which may vary from state to state.

Supersedes all previous publications



Walrus America Inc

9808 Whithorn Drive, Houston, TX 77095
Web: www.walruspumps.com

P099C019U005-04



TQ Series

Electronic Control Pump Instruction Manual



ISO 9001 Certified

Walrus America Inc

EC Declaration of Conformity

Manufacturer:

Walrus Pump Co., Ltd.

Address:

No. 83 -14, Dapiantou, Sanjhuh Township, Taipei County 252,
Taiwan

Declare that the machinery described:

Name : Water Pump

Model : TQ Series

Conform to the following directive:

98/37/EC-----Machinery directive

2006/95/EC—Low voltage directive

2004/108/EC----EMC (Electromagnetic compatibility) directive

Refer to the following standards:

EN ISO 12100-1:2003

EN ISO 12100-2:2003

EN1050:1996

EN60335-1:2001

EN 809:1998

EN60335-2-41:2001

EN61000-6-2

EN61000-6-3

R&D department manager: Kao Tien-chuan

Manager:

Kao Tien chuan

TQ Series Instruction Manual

Please read all instructions carefully before installing your new systems, as failures caused by incorrect installation or operation are not covered by the warranty.

I. Product


The TQ series are designed for the pumping of non-aggressive water, or water not containing solid particles.

II. Operating conditions:


1. Ambient temp. : Max. +104°F (40°C)
2. Liquid temp. : +39°F(4°C) ~ +104°F(40°C)Max.
3. System pressure: Max. 120 PSI
4. Relative humidity: Max. 85%(RH)

III. Installation

1. The pump foundation should be rigid enough to absorb any vibration from the motor, and the pump should be securely bolted to the foundation.
2. It is recommended that the plumber/installer provides an adequate draining system to avoid damage in case of leakage, particularly when installed indoors. When it is installed outside, it should be covered by a weather-proof housing, well ventilated to allow motor heat to escape.
3. The pump should be installed with horizontal suction port and vertical discharge port; and as close as possible to the liquid source.
4. When use with water heaters, a check valve should be installed between pump (discharge) pipeline and water heater (suction) to avoid high-pressure steam backflow.
5. It is required to shut off the pump when the liquid source is unavailable; although it has the dry run cut off function.
6. The pump has a built-in check valve. Please do not install any other valve on the suction.
7. For TQ1500/2200/3700, Please cut out the center of the rubber gasket inside the inlet and outlet flanges as it will block the water flow.

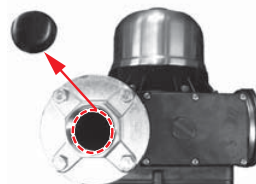

8. When performing regular maintenance, the prime cover has to open in order to check the condition of the check valve. DO NOT apply any bonded material (such as silicon, glue etc) to seal the chamber cover (see drawing below).

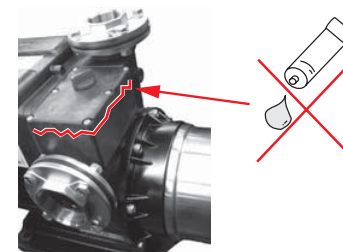

IV. Piping

1. The suction line should be installed as short and straight as possible, with a minimum of bends. The internal diameter of the suction pipe must be equal to, or greater than the ports of the pump.
2. The connection between the suction line and pump must be airtight, and the suction pipe must be positioned so it has an upward slope to the pump (thus avoiding the formation of air pockets).
3. When used on a suction lift, a foot valve should be fitted on the suction line, below the liquid level.
4. If hose is used as the suction pipe, it must be non-collapsible.
5. To minimize pressure drop, the discharge pipe should be at least the same size as the discharge port of the pump.
6. For long suction pipes or high suction lifts over 13 ft, the suction pipe should be of greater diameter than the suction port.
7. Ensure all connections are completely sealed using thread tape only.

V. Electrical connection



This mark located outside the connection box is a warning for an electrical hazard.

1. Ensure the mains voltage is the same as the value shown on the motor plate and that the pump is safely connected to ground/earth.

- The single phase models are supplied with plug and lead and can be connected directly to the mains supply. The 3 phase models should hook up with a circuit breaker.


VI. Wiring diagram

WARNING:

Risk of Electric Shock - This pump is supplied with a grounding conductor and grounding-type attachment plug. To reduce the risk of electric shock, be certain that it is connected only to a properly grounded, grounding-type receptacle".

Before operation, please ensure the voltage is correct and the circuit breaker and grounding connectors are all connected in accordance with local regulations.

Single-phase power supply

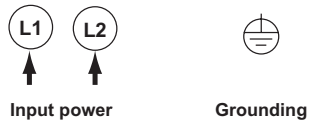

3-phase power supply (check if rotation is correct)



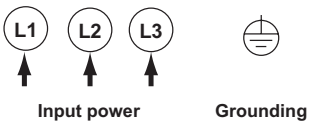


Fig. 1

VII. Starting

- Before starting, the pump must be primed. Please follow the procedure as shown in Fig 3.

a. Remove the filling plug

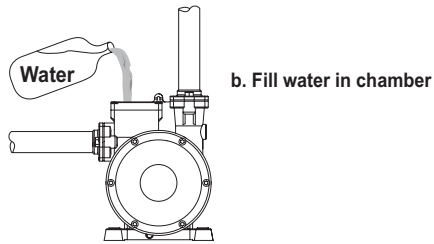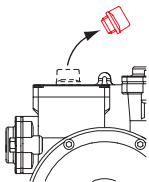

b. Fill water in chamber

c. Replace the filling plug

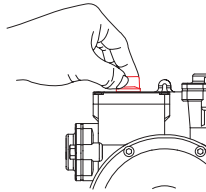


Fig. 2

- Installation where the pump inlet is below the water supply, remove the priming plug and allow the water to flow into the priming chamber until all air is expelled.
- The priming procedure should be repeated until all air is expelled and the pump delivers a full stream of water without air bubbles.
- The pump must always be checked for prime if not used for a prolonged period. It is imperative to fill the pump with liquid before operation as dry running causes irreparable damage to the mechanical seal.
- When 3-phase motor is supplied, please ensure if the rotation is correct. You can switch any of the 2 wires to get your desired rotation.

VIII. Precautions

- The pump should be shut down and the trouble corrected if the pump is running at speed and found to have any of the following problems:
 - No liquid discharged - Not enough liquid discharged
 - Excessive vibration - Motor runs hot
- Do not allow the pump to continually start and stop (cycling) as this will reduce the motor life.

- Cycling can occur on pressure units when the pressure tank pre-charge drops, or where there is a leak in the discharge plumbing.

IX. Operation and maintenance

Under normal operating conditions, the pump does not require any maintenance as long as the following points are observed:

- Periodically check the condition of the check valve and strainer (if used).
- If the pump is to be inactive for long periods, it should be rinsed thoroughly with clean water, then, drained and stored in a dry place.
- If the pump sticks after periods of inactivity, a screw driver slot is provided on the motor shaft end to free up the pump/motor. To do so, insert a screw driver in the slot in the motor shaft as shown in Fig 3 and turn to free the rotor. If this does not remedy the problem, the unit will need dismantling.

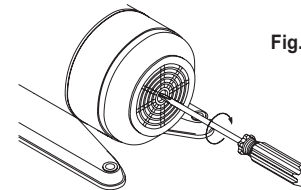


Fig. 3

- Pressure tank air charge should be checked at regular intervals of every 3 months and after the pump has not been used for a prolonged period. To check the Pressure Tank air pressure, turn off power, open a tap on the discharge line to release pressure from the pump, unscrew the black plastic cover and apply an accurate pressure gauge to the valve as shown in Fig 4.

Pressure should be adjusted to the original pre-charge as follows:

- TQ200: 14 psi (1.0 Kg/cm²)
- TQ400: 21 psi (1.5 Kg/cm²)
- TQ800: 28 psi (2.0 Kg/cm²)
- TQ1500 up to TQ3700: 36 psi (2.5 Kg/cm²)

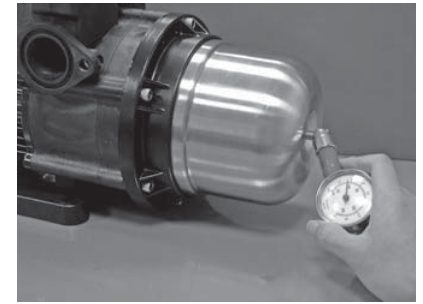


Fig. 4

X. Adjustments and Reset procedures

The TQ has a preset activation pressure as per the table below. For most applications this will be satisfactory.

The factory preset activation point is as follows:

Model	Power (HP)	Preset activation point (psi)
TQ200	¼	17
TQ400	½	26
TQ800	1	36
TQ1500	2	43
TQ2200	3	43
TQ3700	5	43

- When the inlet pressure is below the preset pressure range, please DO NOT adjust the original setting.
- The activation pressure can be adjusted higher when the inlet pressure exceeds the preset pressure range. Remember that inlet pressure adds to the TQ pressure, so take the 40 psi inlet pressure supplied to the TQ800 for example, internal pressure can reach approximately 107 psi (67 + 40 psi). If too high internal pressure is the concern, it is recommended to install a regulator to reduce the inlet pressure. The TQ maximum pressure as per the table below.

Model	Maximum Pressure point (psi)
TQ200	31
TQ400	40
TQ800	67
TQ1500	58
TQ2200	60
TQ3700	72

- The activation pressure must be at least 10 psi below maximum pump pressure.
- The maximum discharge pressure is NOT adjustable.
- The flood suction performance table is as below:

Flooded Suction Performance Table

TQ200

Inlet pressure (psi)	Flow rate				
	3 gpm	6 gpm	9 gpm	12 gpm	15 gpm
5	32	27	22	17	10
10	37	32	27	22	15
15	42	37	32	27	20
** 20	47	42	37	32	25
** 25	52	47	42	37	30

** Need to adjust pressure switch setting when inlet pressure is higher than the preset activation point (TQ200 preset at 17 psi)

TQ400

Inlet pressure (psi)	Flow rate					
	3 gpm	6 gpm	9 gpm	12 gpm	15 gpm	18 gpm
10	48	42	37	30	23	15
20	58	52	47	40	33	25
** 30	68	62	57	50	43	35
** 40	78	72	67	60	53	45

** Need to adjust pressure switch setting when inlet pressure is higher than the preset activation point (TQ400 preset at 26 psi)

TQ800

Inlet pressure (psi)	Flow rate						
	3 gpm	6 gpm	9 gpm	12 gpm	15 gpm	18 gpm	21 gpm
10	73	69	63	57	49	39	27
20	83	79	73	67	59	49	37
30	93	89	83	77	69	59	47
** 40	103	99	93	87	79	69	57

** Need to adjust pressure switch setting when inlet pressure is higher than the preset activation point (TQ800 preset at 36 psi)

TQ1500

Inlet pressure (psi)	Flow rate					
	10 gpm	20 gpm	30 gpm	40 gpm	50 gpm	60 gpm
10	63	59	55	48	39	27
20	73	69	65	58	49	37
30	83	79	75	68	59	47
40	93	89	85	78	69	57

TQ2200


Inlet pressure (psi)	Flow rate					
	10 gpm	20 gpm	30 gpm	40 gpm	50 gpm	60 gpm
10	66	62	58	53	46	36
20	76	72	68	63	56	46
30	86	82	78	73	66	56
40	96	92	88	83	76	66

TQ3700

Inlet pressure (psi)	Flow rate					
	10 gpm	20 gpm	30 gpm	40 gpm	50 gpm	60 gpm
10	80	75	70	65	59	49
20	90	85	80	75	69	59
30	100	95	90	85	79	69
40	110	105	100	95	89	79

XI. Adjust pressure switch


Adjust the pressure switch setting (according to the pump models) as shown in Fig 5. Make sure the system is primed.

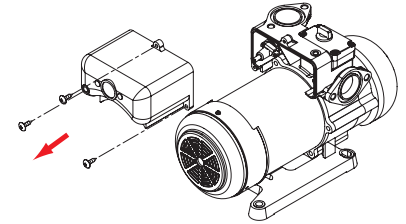

The pump is supplied with a preset pressure in the pressure switch. For most applications, it will be satisfactory. In some cases a different pressure may be required. This can be achieved by following the instructions below. However, it is highly recommended that the adjustment is only done by the professional personnel.



Instructions for pressure adjustment (Fig. 5):

- If pump does not start when tap is on, adjust clockwise ("+") till it starts.
- If pump does not stop when no water is consumed, adjust counterclockwise ("-") till it stops.
- After adjustment is made, turn it on and off several times to make sure it operates normally.

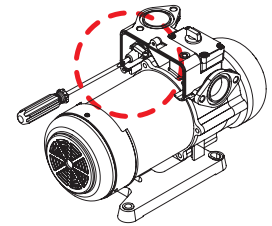


TQ 200/400/800

Open the cover to adjust the pressure

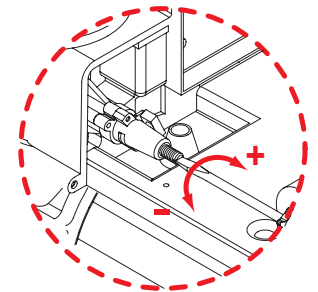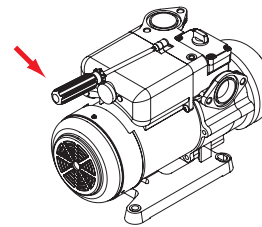


XIV. Dimensions: (in.)

TQ200/400/800

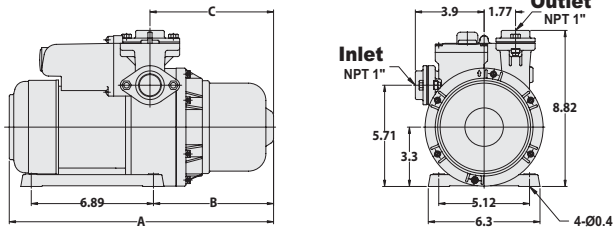

TQ1500/2200/3700

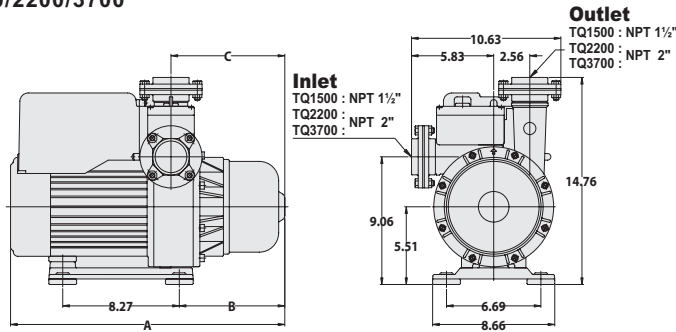

Model	A (in.)	B (in.)	C (in.)
TQ 200	14.37	6.26	6.46
TQ 400	14.92	6.77	6.97
TQ 800	17.76	7.80	7.99
TQ1500~3700	19.72	7.76	8.35

XV. Specification:

Model	Power (HP)	Cycle (Hz)	Phase (Ø)	Voltage (V)	Amp's (A)	Inlet (NPT)	Outlet (NPT)	H max. (ft)	Q max. (GPM)
TQ200	¼	60	1	115 or 230	4.0 or 2.0	1"	1"	72	16.9
TQ400	½	60	1	115 or 230	6.0 or 3.0	1"	1"	92	18.5
TQ800	1	60	1	115 or 230	11.0 or 5.5	1"	1"	154	23.8
TQ1500	2	60	1 or 3	230	9.5 or 6.5	1½"	1½"	134	66.0
TQ2200	3	60	3	230	9.5	2"	2"	138	71.3
TQ3700	5	60	3	230	12	2"	2"	167	71.3

XVI. Troubleshooting



Before starting work on the pump, make sure that the electricity supply has been switched off and that it cannot be accidentally switched on.

Problem	Cause	Remedy
1. pump does not start.	a. No power supply.	Connect the electricity supply.
	b. Too low/high voltage.	Check if supply voltage is within ± 10%
	c. Inadequate pressure at suction or discharge .	Follow X and XI of the Operation Manual.
	d. Seized-up pump.	Place a screwdriver against the shaft end of the motor to check if the rotor will spin freely, and contact your pump supplier.
2. Pump cuts out during operation.	a. Overloaded motor.	Turn off the power supply and restart or contact your pump supplier.
	b. Poor water supply.	Check if pump suction inlet is blocked.
	c. Overheating due to excessive water temperature.	1. Wait till water temp. cool down before restarting the pump. 2. Check water supply source.
3. Pump starts when no water is consumed.	a. Existing pipe is leaking.	Fix the leakage.
	b. Defective check valve.	Clean or replace with a new valve.
4. Pump starts and stops too frequently.	a. Leakage in suction pipe or air in the water.	Check the suction pipe and water supply.
	b. Discharge flow is too low.	Set your tap on a higher water flow.
	c. Air tank pressure is too low	Charge air per IX-4 of the manual.
5. Electric shock.	a. Ineffective grounding.	Reactivate grounding.
6. Pump does not stop when water is not consumed	a. Poor water supply or air suck in.	1. Turn off the power supply and open the refilling plug to release the air. Then restart. 2. In case of long suction pipes, turn off the power and make sure if water supply is adequate.
	b. Pressure set is too high.	Adjust pressure per XI
	c. Flow set is too small.	Adjust flow switch per XII
	d. Defective check valve.	Clean or replace with a new valve.
7. Pump runs normal but with very low discharge flow.	a. 3-phase motor runs in wrong rotation.	Switch any of the 2 wires from motor terminal to correct rotation.
	b. Poor water supply.	check if water supply is adequate and if the suction pipe is blocked.